

Installing the Cargo Door Lock

1. Determine an easy access location to install the Cargo Door Lock.
2. Separate the two halves of the Cargo Door Lock aligning them so the lock mechanism and holes are both facing downward.
3. Install one half of the Cargo Door Lock on each doors' locking bar.
4. Slide the two halves together by inserting the smaller tube into the larger tube.
5. Secure the Cargo Door Lock as tight as possible on both doors' locking arms and depress the locking button with key removed or turn dials.

NOTE: Minor adjustments may be made to align the locking pin and holes.

6. Your Cargo Door Lock is properly installed. Secure your keys in a safe location

Removing the Cargo Door Lock

1. Insert key and turn it one quarter turn in the clockwise direction or turn dials to your preset combination and press inward. The lock mechanism will 'pop out'. If there is pressure on the locking pin, a slight adjustment of the two halves may be necessary to free the pin.
2. Return key one quarter turn counter clockwise and remove. (If keyed type) Secure your keys in a safe location.
3. Separate the two halves of the Cargo Door Lock by sliding them away from each other and remove from the door.
4. Once removed, re-insert the small tube into the larger tube with the lock mechanism and holes aligned.
5. Depress the locking mechanism and store your Cargo Door Lock in a location to allow for safe equipment operation.

Setting your combination The lock is preset from the factory at 0000.

1. Unlock the mechanism by setting the four dials to the preset combination and press inward causing mechanism to 'pop out'.
2. Insert the special key in the keyhole, pressing in firmly, and turn one quarter turn in either direction. (Key will click into place.)
3. Set numerical combination of choice. Turn key to original position, with key in line with locking device.

Watch the Heavy Duty Cargo Door Lock Installation Video

<http://www.equipmentlock.com/video/Cargo%20Door%20Lock.wmv>