

Medium Pressure Lawn Spray Kit

A – ½" yellow hose


B – 3/8" yellow hose

C – 3/4" red hose


D – 1" clear braided hose

1. Install anti-vortex fitting inside bottom of the tank
2. Install elbow barb outside of tank to the anti-vortex
3. Install bulkheads on top of tank with elbow barbs on top and straight barbs inside the tank
4. Agitation hangs inside the tank. Cut hose for desired length inside the tank.
5. ½" yellow hose to reel/gun (hose barb A)
6. Attach your frame or unit
7. Attach to the pump


Return Assy

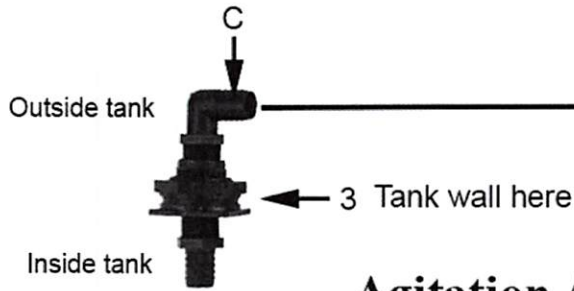



Pressure Assy

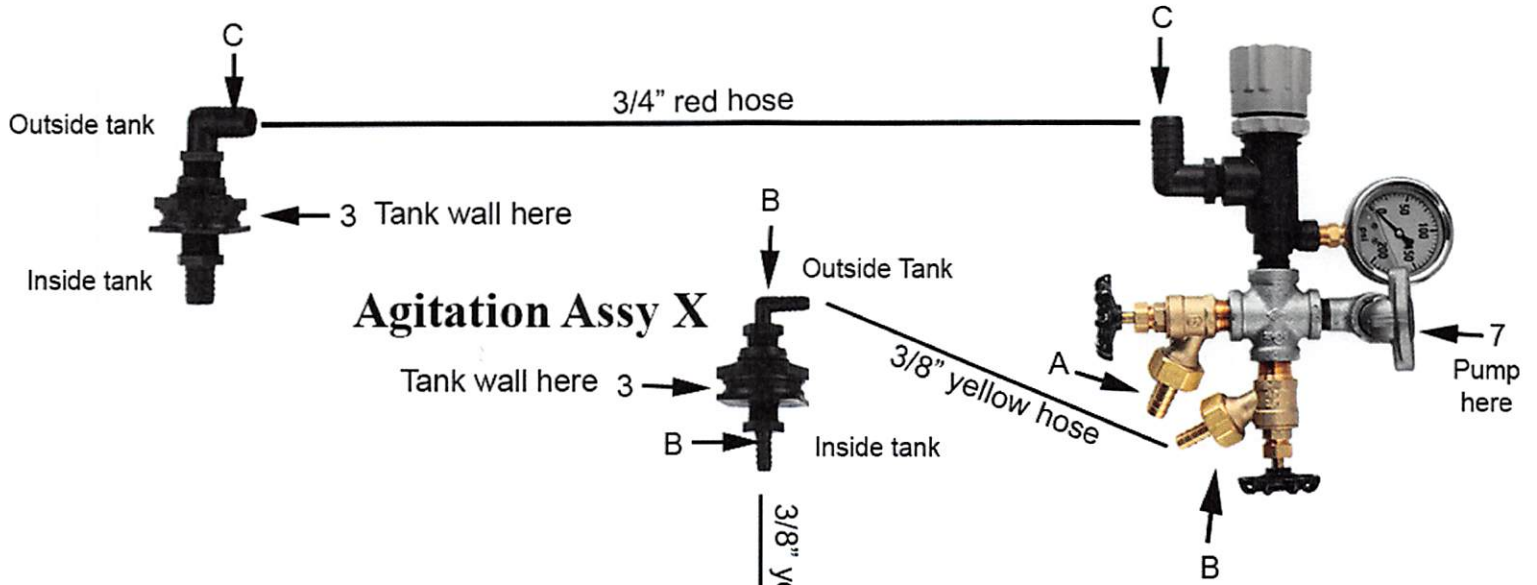


Agitation Assy X

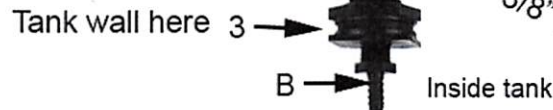


Agitation Assy Y

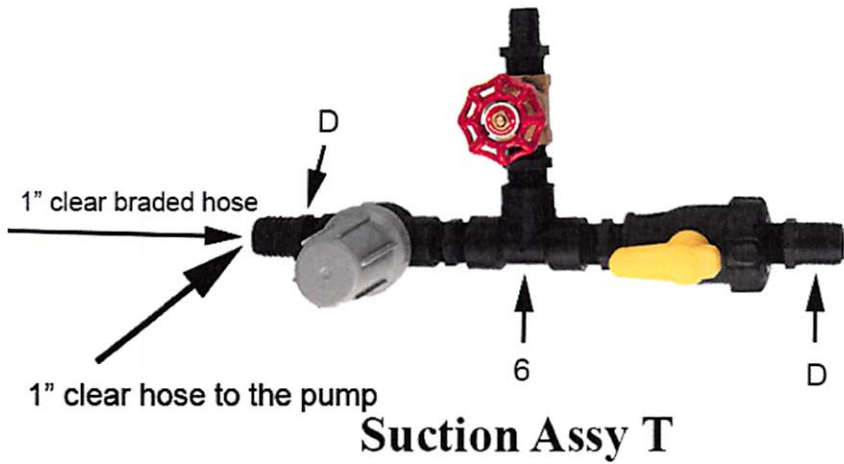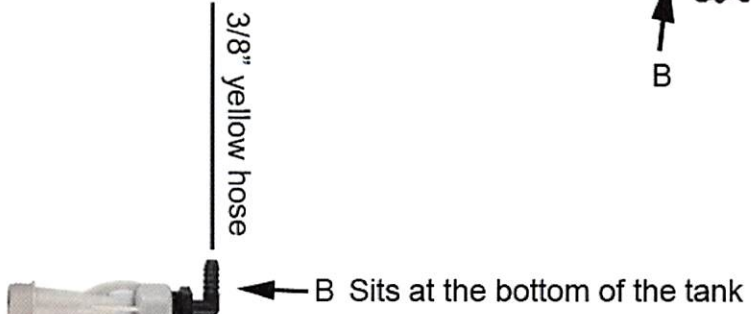

Suction Assy T

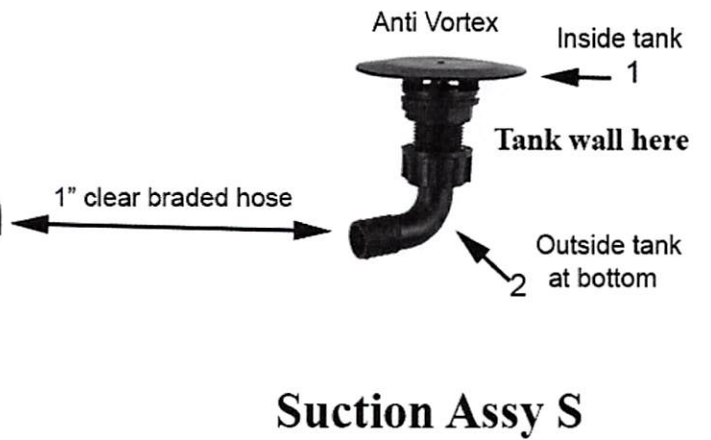

Suction Assy S

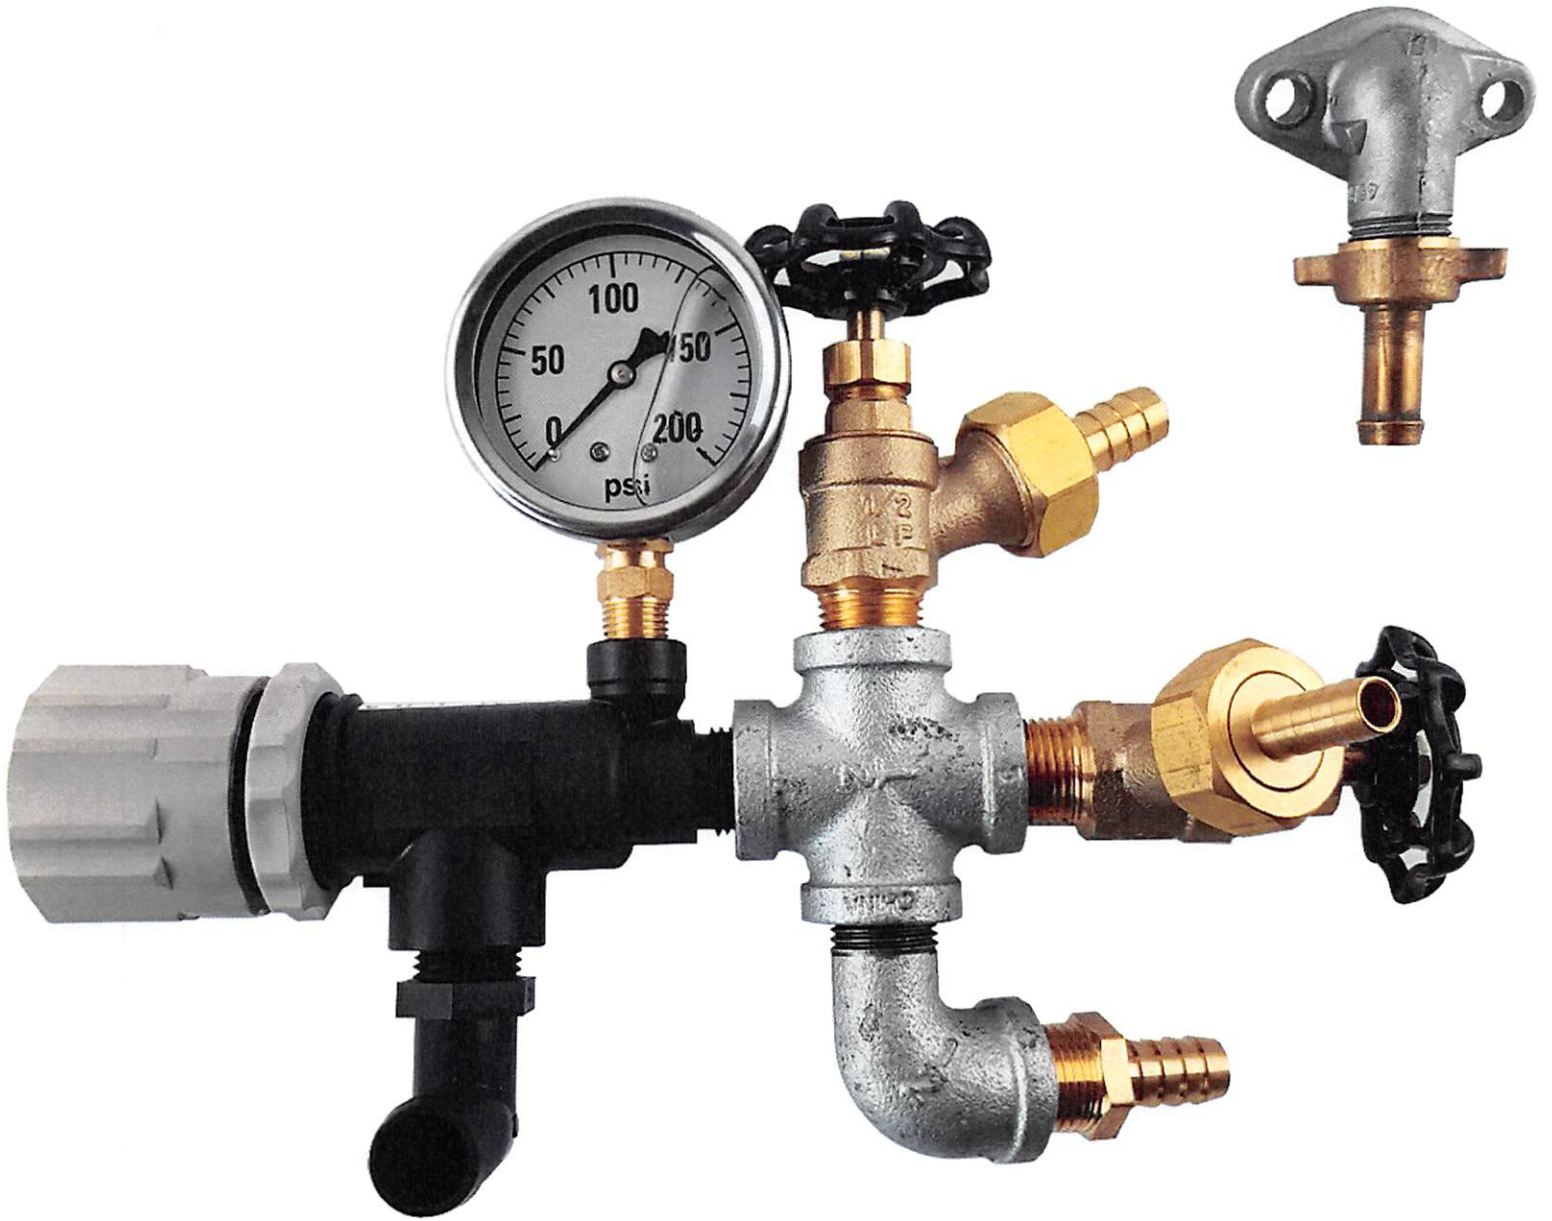

Pressure Assembly

Option to mount freely