


## OPEN MOUNT

Tools Needed: 13/32 Inch Drill Bit and a 16MM Wrench

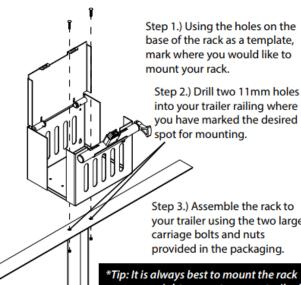

Step 4.) Remove the adhesive seal from the rubber pad.


Step 5.) Place rubber pad over the base of the inside of the rack.


> \*Please note that the rack must be installed before placing the rubber pad into the rack.

your trailer using the two large provided in the packaging.

\*Tip: It is always best to mount the rack over an upright support on your trailer for added stability.

Tools Needed: 3/8 Inch Driver

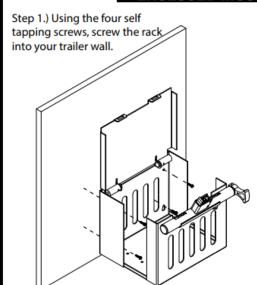

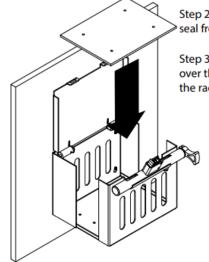

Step 2.) Remove the adhesive seal from the rubber pad.

Step 3.) Place rubber pad over the base of the inside of the rack.